

**Field-mounted Two-wire Signal Conditioners 6-UNIT**

**4-DIGIT LOOP POWERED INDICATOR**

MODEL **6DV**

**MODEL & SUFFIX CODE SELECTION**

MODEL \_\_\_\_\_ **6DV-□**

INPUT: 4 – 20mA DC

SAFETY APPROVAL \_\_\_\_\_

0 : None

**ORDERING INFORMATION**

Specify code number. (e.g. 6DV-0)

**RELATED PRODUCTS**

- DIN rail mounting adaptor (model: A-34)
- Mounting spacer (model: A-6)

**GENERAL SPECIFICATIONS**

**Connection:** Terminal block

**Applicable wire size:** AWG26-16 (0.14 – 1.5 mm<sup>2</sup>)

**Housing material:** Flame-resistant resin (black)

**Input configuration:** Dual-slope integration

**Scaling:** Software programming via the control buttons on the top

**Linearization:** Proportional, SQRT (X<sup>1/2</sup>), RT32 (X<sup>3/2</sup>), RT52 (X<sup>5/2</sup>), user's linearization table (max. 21 calibration points)

**Program lock:** Prevents button controls

**DISPLAY**

**LED:** 8 mm (.3") 7-segment, red

**Number of display digits:** 4

**Scaling range:** -1999 – 9999

**Offset range:** -1999 – 9999


**Decimal point position:** 10<sup>-1</sup>, 10<sup>-2</sup>, 10<sup>-3</sup>, or no decimal point

**Polarity sign:** Minus (–) sign added automatically according to the computation result

**Read rate:** 2.5/s

**Over-range warning:** All segments dark except the top ones that blinks with the input exceeding the display/measurable range; or the bottom ones that blinks with the input below the range.

**Engineering unit display:** Unit label included; LED backlight provided

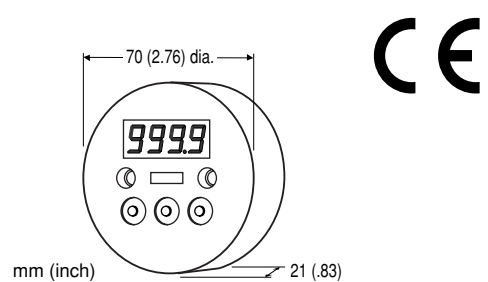

**Functions & Features**

- 4-digit LED display
- No external power source needed
- Scaling, linearization and other configurations selectable via three front control buttons
- Mountable on top of the Two-wire Universal Temperature Transmitter (model: 27HU)

**INPUT**

■**DC CURRENT:** 4 – 20mA DC

**Measurable range:** 3.75 – 23mA DC

**Maximum input current:** 100mA

**Voltage drop\*:** Approx. 3.7V with 4mA; approx. 4.0V with 20mA

\*The minimum required supply voltage to the 2-wire transmitter added with the indicator's voltage drop at the maximum input current must be within the output voltage range of the 2-wire transmitter's excitation supply.

**INSTALLATION**

**Operating temperature:** -40 to +85°C (-40 to +185°F)

**Operating humidity:** 0 to 95% RH (non-condensing)

**Dimensions:** Refer to the External Dimensions.

**Weight:** 65 g (2.3 oz)

**PERFORMANCE**

**Accuracy:** ±0.01mA

**Temp. coefficient:** ±0.015%/°C (±0.008%/°F) at 4 – 20mA input

■**HOW TO CALCULATE ACCURACY AGAINST SCALE**

**Example 1** (4 – 20mA input, Scale 0 – 100)

$$\text{Accuracy} = 0.01\text{mA} \div (20 - 4)\text{mA} \times 100 = 0.063\%$$

$$\text{Display Error} = (100 - 0) \times 0.063\% = \pm 0.063 \text{ digits}$$

**Example 2** (10 – 20mA input, Scale 100 – 1000)

$$\text{Accuracy} = 0.01\text{mA} \div (20 - 10)\text{mA} \times 100 = 0.1\%$$

$$\text{Display Error} = (1000 - 100) \times 0.1\% = \pm 0.9 \text{ digits}$$


## STANDARDS & APPROVALS

CE conformity: EMC Directive (89/336/EEC)

EMI EN61000-6-4

EMS EN61000-6-2

## TOP VIEW

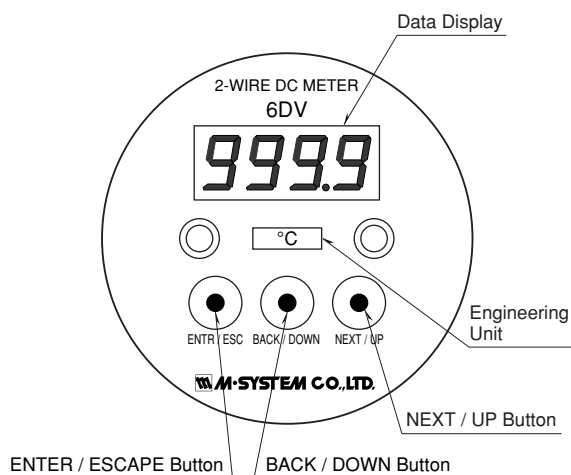

### ENTER / ESCAPE Button

**ENTER:** Used to call up the program menu and to apply parameter changes. Press for longer than 2 seconds.

**ESCAPE:** Used to cancel menu selections and to cancel parameter changes. Push for a brief period.

**BACK / DOWN Button:** Used to select a menu item or to decrease parameter values.

**NEXT / UP Button:** Used to select a menu item or to increase parameter values.

### •How to Reset All Parameters to the Factory Setting

Turn off the power supply to the 6DV. In pressing all the three control buttons at once, turn it on. When a message appears on the data display, press ENTER. If you want to cancel the procedure, turn the power supply off.

### ■ DISPLAY DIGITS

The decimal point position may shift according to the required number of digits for the integer section, even when more than one decimal places have been specified.

However, when the number of decimal places is set to 3, the '0' in the integer section is not shown in order to secure the number of effective digits, as explained in the table below.

The '0' is displayed when the number of decimal places is set to 2, though the number of effective digits in this case is reduced by 1 digit compared from the 3 decimal places.

Select appropriately for the application. Refer to 'PROGRAMMING PROCEDURE' for how to choose decimal point positions.

DECIMALS	VALUE	DISPLAY
3	-1.000 to -1.999	<del>1.000</del> to <del>1.999</del>
	-0.001 to -0.999	<del>-0.001</del> to <del>-0.999</del>
2	-1.00 to -1.99	<del>-1.00</del> to <del>-1.99</del>
	-0.01 to -0.99	<del>-0.01</del> to <del>-0.99</del>



### ■ ERROR INDICATION

The data display blinks when an abnormality is detected. The unit display backlight also blinks.


When the setting error or the security code error occurs, press ESCAPE key once to cancel the error status and proceed to set again.

ERROR TYPE	DATA DISPLAY
Over-scale	----
Under-scale	----
Setting error	Errr
Security code error	Errr

## CONNECTION DIAGRAM

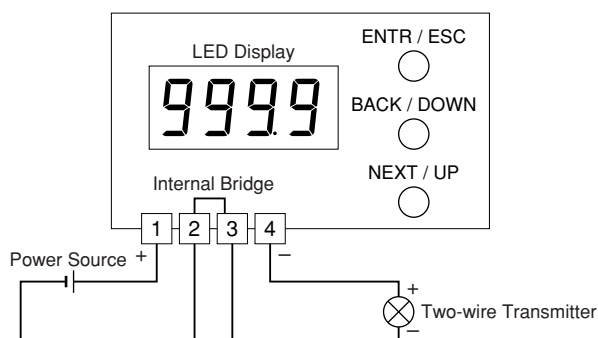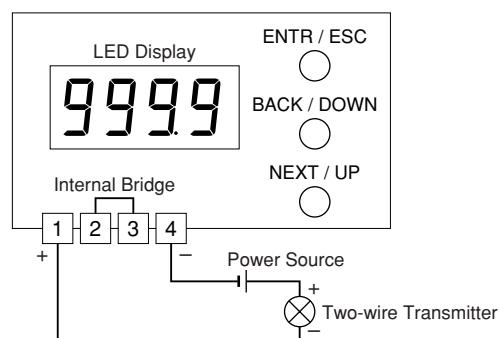


**EXTERNAL DIMENSIONS mm (inch)**

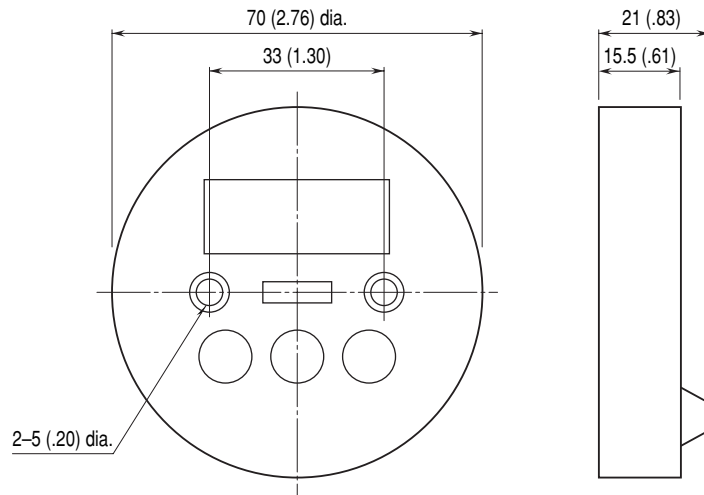

**MOUNTING REQUIREMENTS mm (inch)**



**PROGRAMMING PROCEDURE**

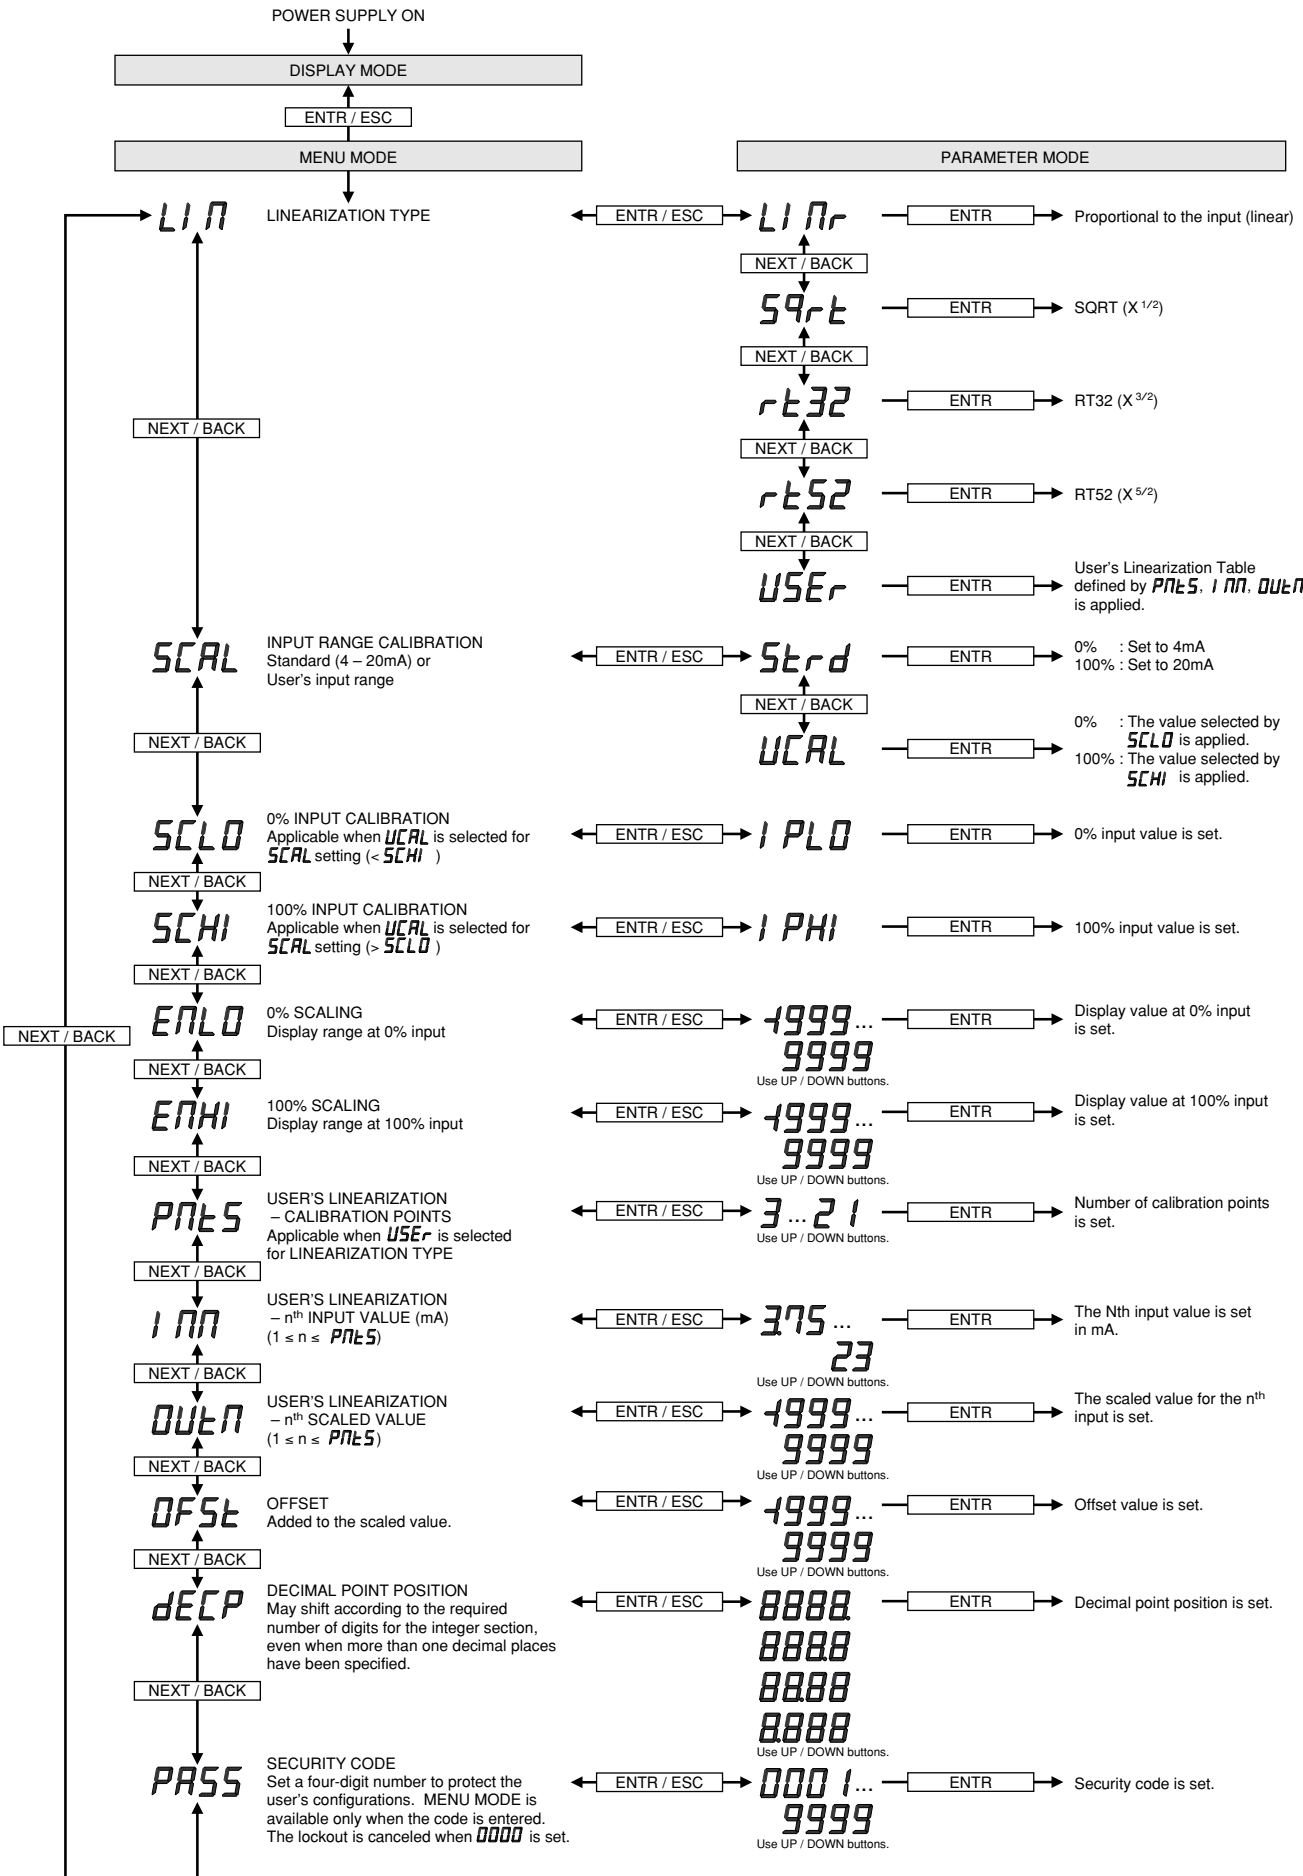

Specifications subject to change without notice.